

For further assistance on how to
use your Tenovi device,
please contact a Tenovi representative
at:

Phone: (714) 418-5658

Email:
support@tenovi.com




© 2021 Tenovi Co.


All rights reserved. Republication, duplication or modification
in whole or in part is prohibited without prior written permission
from Tenovi. All trademarks are owned by or licensed to
Tenovi, Co. unless otherwise noted.

Revision 05.01.2021


- 1** Plug your gateway into a power outlet with the provided power cord and wait until the LED on the gateway turns red.

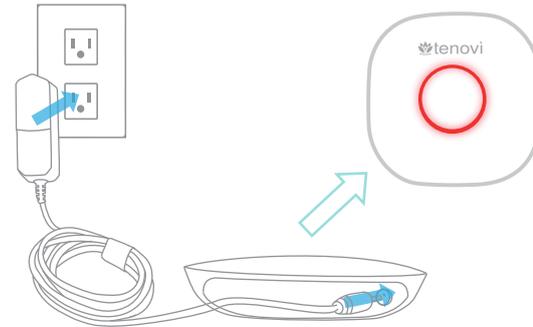


- 2** Remove the battery cover and insert the batteries into the back side of your Peak Flow Meter

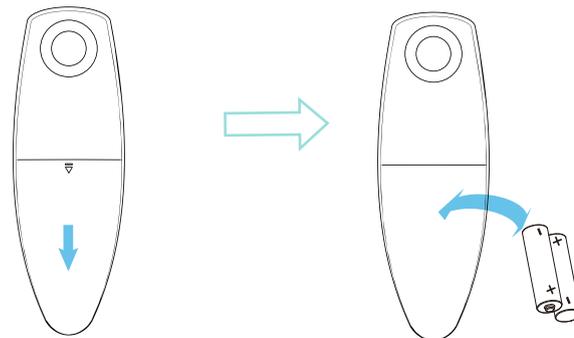


3 Press the power button for 3 seconds and wait for the Tenovi Gateway to start flashing yellow.

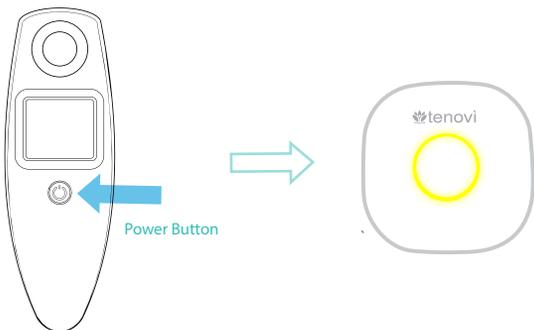

4 Take a deep breath, then exhale quickly into the Tenovi Peak Flow Meter.

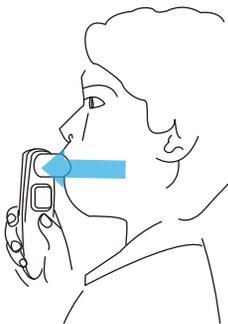

5 After the readings become visible on the screen, the Peak Flow Meter will transmit the data to the Gateway. If the LED ring is **Green**, you have properly taken a measurement for the day and that measurement has been successfully transmitted. The Peak Flow Meter will automatically shut down.

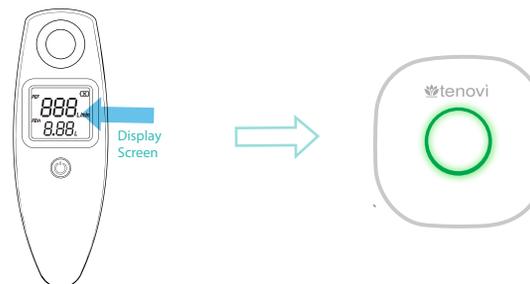

6 **Take one measurement once per day unless otherwise advised by your healthcare provider.** The LED on your Tenovi device will turn **Red** at the beginning of each day indicating you must take measurement for that day. The LED ring will turn **Green** when you successfully take a measurement and transmit it to your healthcare provider.



Measurement Needed



Measurement Successful